

ABE04

ORIGINAL INSTRUCTIONS

Blower Attachment













Important!

It is essential that you read the instructions in this manual before assembling, operating, and maintaining the product.

Subject to technical modification.







Safety, performance, and dependability have been given top priority in the design of your blower attachment.

INTENDED USE

This blower attachment is approved for use with all RYOBI/HOMELITE petrol-driven power head of 30cc or less or with the RPH1100E electric-driven power head.

It is intended to be used only by adults who have read and understood the instructions and warnings in this manual and relevant power head manual and can be considered responsible for their actions.

This product is only intended for use outdoors in dry and well-illuminated conditions.

The product is designed for blowing light debris including leaves, grass, and other garden refuse.

Do not use the product for any other purpose.

GENERAL SAFETY WARNINGS

A WARNING

Read all safety warnings and all instructions. Failure to follow the warnings and instructions may result in electric shock, fire, and/or serious injury. Save all warnings and instructions for future reference.

A WARNING

Never allow children or people unfamiliar with these instructions to use the product. Local regulations may restrict the age of the operator.

TRAINING

- Read the instructions carefully. Be familiar with the controls and the correct use of the product.
- Keep in mind that the operator is responsible for accidents or hazards occurring to other people or their property.
- Never use the product when you are tired, ill, or under the influence of alcohol, drugs, or medicine.

PREPARATION

 Some regions have regulations that restrict the use of the product to some operations. Check with your local authority for advice.

- Do not allow children or untrained individuals to use the product.
- Never start or run the engine in a closed or poorly ventilated area. Breathing exhaust fumes can kill.
- Wear hearing protection at all times while operating the product. The product is extremely noisy and permanent hearing injury may result if precautions to limit your exposure, reduce noise, and wear hearing protection are not strictly adhered to.
- Wear full eye protection at all times while operating the product. The manufacturer strongly suggests you use a full face mask or fully enclosed goggles. Normal spectacles or sun glasses are not adequate protection. Objects can be thrown at high speed by the powerful air jet at any time and may rebound from hard surfaces toward the operator.
- While operating the product, always wear substantial footwear and long trousers. Do not operate the product when barefoot or wearing open sandals. Avoid wearing clothing that is loose fitting or that has hanging cords or ties.
- Do not wear loose clothing or jewellery that can be drawn into the air inlet.
- Secure long hair so it is above shoulder level to prevent entanglement in moving parts.
- Beware of thrown objects. Keep all bystanders, children, and pets at least 15 m away from work area.
- Before each use, ensure that all controls and safety devices function correctly. Do not use the product if the off switch does not stop the product.
- Operate the product in a recommended position and only on a firm, level surface.
- Do not operate the product on a paved or gravel surface where ejected material could cause injury.
- Before each use, always inspect the housing for damage. Ensure that guards and handles are in place and properly secured. Replace worn or damaged components in sets to preserve balance. Replace damaged or unreadable labels.
- Never operate the product while people,





- especially children, or pets are nearby.
- Keep all cooling air inlets clear of debris.
- Use rakes and brooms to loosen debris before blowing.
- Clear the work area before each use. Remove all objects such as rocks, broken glass, nails, wire, or string which can be blown a considerable distance by high velocity air.

For assembling with petrol-driven power head

- Do not touch the area around the silencer or the cylinder of the product. These parts get hot from operation.
- Stop the engine and allow the product to cool down before refuelling.
- For refuelling and fuel mixing, chose an area that is well-ventilated, and is away from ignition sources, such as sparks or flames, and flammable materials.
- Do not smoke when mixing fuel or filling the fuel tank.
- Mix and store fuel in a container approved for fuel. Keep an appropriate type of fire extinguisher nearby for dealing with fuel fires.
- Remember to securely refit the fuel tank cap before starting the engine. Check for fuel leaks.
- Wipe away any fuel spillage. Move 9 m away from refuelling site before starting engine.

For assembling with electric-driven power head

- Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools. Unmodified plugs and matching outlets will reduce the risk of electric shock.
- Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges, and refrigerators. There is an increased risk of electric shock if your body is earthed or grounded.
- Do not expose power tools to rain or wet conditions. Water entering the product will increase the risk of electric shock.
- Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the

- power tool. Keep cord away from heat, oil, sharp edges or moving parts. Damaged or entangled cords increase the risk of electric shock.
- Before every use, examine the power cord for damage. If there are signs of damage, it must be replaced by at an authorised service centre.
- When operating a power tool outdoors, use an extension cord suitable for outdoor use. Use of a cord suitable for outdoor use reduces the risk of electric shock.
- Before use, check the supply and extension cord for signs of damage or aging. If the cord becomes damaged during use, disconnect the cord from the supply immediately. Do not touch the cord before disconnecting the supply. Do not use the product if the cord is damaged or worn.
- If you need to use an extension cord, ensure it is suitable for outdoor use and has a current capacity rating sufficient to supply your tool. Check the extension cord before every use for damage. Always uncoil the extension cord during use because coiled cords can overheat. Damaged extension cords should not be repaired, they should be replaced with an equivalent type.
- Make sure the power cord is positioned so that it will not be stepped on, tripped over, or otherwise subjected to damage or stress.
- Never pick up or carry the product by the electric cable.
- Avoid unintentional starting. Always check that the switch is in the off position before plugging in the product to the power supply. Do not carry a plugged-in product with your finger on the switch.
- Never pull by the power cord to disconnect from the power supply.
- Keep the power cord away from heat, oil, and sharp edges.
- Always direct the cable to the rear, away from the machine.
- Make sure voltage is correct for your product. A nameplate on the product indicates the unit's voltage. Never connect the product to an AC voltage that differs from this voltage.
- Make sure the switch is in off position before disconnecting from power supply.







■ The manufacturer recommends you connect to a power socket protected by an RCD with a trip of 30 mA or less.

BLOWER SAFETY WARNINGS

- Operate the product only at reasonable hours – not early in the morning or late at night when people might be disturbed.
- Never operate the product in an explosive atmosphere.
- Avoid using the product in bad weather conditions, especially when there is a risk of lightning.
- Do not operate in poor lighting. The operator requires a clear view of the work area to identify potential hazards.
- Operating similar tools nearby increases both the risk of hearing injury and the potential for other persons to enter your working area.
- Always be sure of the footing on slopes. Walk, never run.
- Keep proper footing and balance. Do not overreach. Overreaching can result in loss of balance.
- Never use the product with defective guards or shields, or without safety devices in place.
- Keep the power source clear of debris and other accumulations to prevent damage to the power source or possible fire.
- Do not modify the product in any way or use parts and accessories which are not recommended by the manufacturer.

A WARNING

If the product is dropped, suffers heavy impact, or begins to vibrate abnormally, immediately stop the product and inspect for damage or identify the cause of the vibration. Any damage should be properly repaired or replaced by an authorised service centre.

- To reduce the risk of injury associated with contacting rotating parts, always stop the product, and disconnect from the power supply (if applicable), and make sure all moving parts have come to a stop before:
 - leaving the product unattended
 - clearing blockages

- checking, cleaning, or working on the product
- inspecting the product after striking a foreign object
- Immediately switch off the product and disconnect from the power supply in the event of accident or breakdown. Do not operate the product again until it has been fully checked by an authorised service centre.
- Wear a face filter mask in dusty conditions to reduce the risk of injury associated with the inhalation of dust.
- Slightly dampen surfaces in dusty conditions.
- Do not use the product near open windows.
- Never place objects inside the blower tubes.
- Use the full blower nozzle extension so that the air stream can work close to the ground and perform effectively.
- Do not point the blower nozzle in the direction of people or pets.
- Do not place blower on top of or near loose debris. Debris may be sucked into intake vent resulting in possible damage to the product.

TRANSPORTATION AND STORAGE

For assembling with petrol-driven power head

- Stop the engine and allow it to cool before storing or transporting.
- Clean all foreign material from the product.
- Drain all fuel from the tank into a container approved for petrol. Remember to properly replace and tighten the fuel cap.
- Run the engine until it stops, this will remove all fuel that could become stale and leave varnish and gum in the fuel system.
- If applicable, drain all lubricant from tank into a container approved for lubricant. Remember to properly replace the lubricant cap.
- Store the product in a cool dry and well-ventilated place that is inaccessible to children. Keep away from corrosive agents, such as garden chemicals and de-icing salts.





- Do not store outdoors.
- When transporting the product in a vehicle, secure it against movement or falling to prevent injury to persons or damage to the product.
- Never transport the product while the engine is running.
- Abide by all government and local regulations for the safety storage and handling of petrol.

Short term (less than 1 month)

- Stop the engine and allow it to cool before storing.
- Clean all foreign material from the product.
- Store the product in a cool, dry, and wellventilated place that is inaccessible to children.
- Keep away from corrosive agents such as garden chemicals and de-icing salts.
- Do not store outdoors.

For assembling with electric-driven power head

- Stop the product, disconnect from the power supply, and allow it to cool down before storing or transporting.
- Clean all foreign material from the product. Store it in a cool, dry, and well-ventilated place that is inaccessible to children. Keep it away from corrosive agents, such as garden chemicals and de-icing salts. Do not store outdoors.
- For transportation in a vehicle, secure the product against movement or falling to prevent injury to persons or damage to the product.

MAINTENANCE

A WARNING

Use only original manufacturer's replacement parts, accessories, and attachments. Failure to do so can cause possible injury, poor performance, and may void your warranty.

A WARNING

Servicing requires extreme care and knowledge, and should be performed only by a qualified service technician. For service we suggest you bring the product to your nearest authorised service centre for repair. When servicing, use only identical replacement parts.

- Switch off, disconnect the product from the power supply (if applicable), and make sure all moving parts have come to a complete stop before conducting any maintenance or cleaning work.
- You may make adjustments and repairs described in this manual. For other repairs, contact the authorised service centre.
- After each use, clean the product with a soft, dry cloth.
- Check all nuts, bolts, and screws at frequent intervals for proper tightness to ensure the product is in safe working condition. Any part that is damaged should be properly repaired or replaced by an authorized service centre.
- Bring the product to an authorised service centre to replace damaged or unreadable labels.

CLEARING A BLOCKAGE

- To reduce the risk of injury associated with contacting rotating parts, always stop the engine, and make sure all moving parts have come to a complete stop.
- Remove the blower tubes to inspect for blockage. Clear the tubes if required.
- Reinstall the blower tubes before starting the product.

RESIDUAL RISKS

(lacktriangle)

Even when the product is used as prescribed, it is still impossible to completely eliminate certain residual risk factors. The following hazards may arise in use and the operator should pay special attention to avoid the following:

- Injury caused by vibration.
 - Always use the right tool for the job. Use designated handles and use the lowest speed necessary to achieve the task.







- Hearing injury caused by exposure to noise.
 - Wear ear protection and limit exposure.
- Injury from flying objects from the blow tube airflow.
 - Wear eye protection at all times.

RISK REDUCTION

It has been reported that vibrations from handheld tools may contribute to a condition called Raynaud's Syndrome in certain individuals. Symptoms may include tingling, numbness, and blanching of the fingers, usually apparent upon exposure to cold. Hereditary factors, exposure to cold and dampness, diet, smoking, and work practices are all thought to contribute to the development of these symptoms. There are measures that can be taken by the operator to possibly reduce the effects of vibration:

- Keep your body warm in cold weather. When operating the product, wear gloves to keep the hands and wrists warm. It is reported that cold weather is a major factor contributing to Raynaud's Syndrome.
- After each period of operation, exercise to increase blood circulation.
- Take frequent work breaks. Limit the amount of exposure per day.

If you experience any of the symptoms of this condition, immediately discontinue use and see your physician.

A WARNING

Injuries may be caused, or aggravated, by prolonged use of the product. When using any tool for prolonged periods, ensure you take regular breaks.

KNOW YOUR PRODUCT

See page 8.

- Attachment securing cap
- 2. Lower boom
- Nylon threaded nut
- 4. Fan cover
- 5. High speed nozzle
- 6. Bottom volute

SYMBOLS ON THE PRODUCT



Read and understand all instructions before operating the product, follow all warnings and safety instructions



Beware of thrown or flying objects. Keep all bystanders, especially children and pets, at least 15 m away from the operating area.



Rotating fans. Keep hands and feet out of openings while the product is running.



The measured sound power level is 104 dB(A).



Switch off: Remove the plug from the mains before cleaning or conducting maintenance.

NOTE: This icon applies only for assembling with electric-driven power head.



Wear ear protection.



Wear eve protection.



Do not expose to rain or damp condition.



Ukrainian mark of conformity



EurAsian Conformity Mark



Conforms to all regulatory standards in the country in the EU where the product is purchased.









Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority or retailer for recycling advice.

SYMBOLS IN THIS MANUAL



Parts or accessories sold separately



Note



Warning

The following signal words and meanings are intended to explain the levels of risk associated with this product.

⚠ DANGER

Indicates an imminently hazardous situation, which, if not avoided, will result in death or serious injury.

⚠ WARNING

Indicates a potentially hazardous situation, which, if not avoided, could result in death or serious injury.

↑ CAUTION

Indicates a potentially hazardous situation, which, if not avoided, may result in minor or moderate injury.


CAUTION

Without safety alert symbol Indicates a situation that may result in property damage.








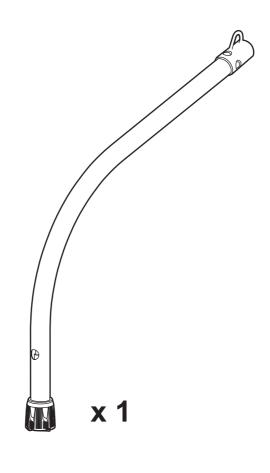


x 1

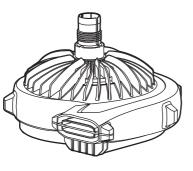



7



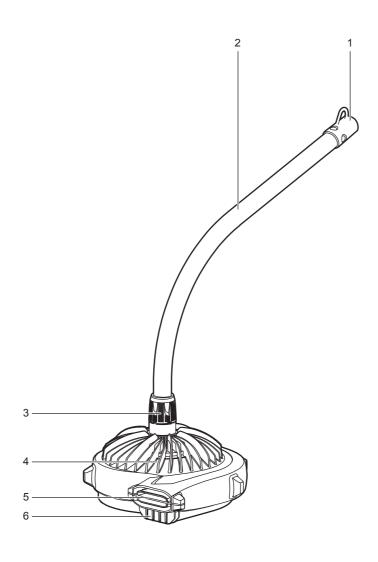











(

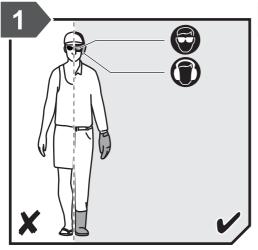

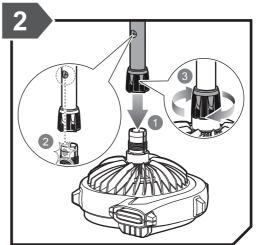




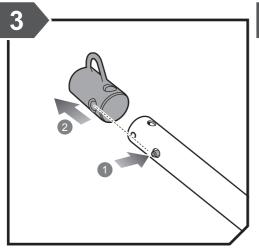

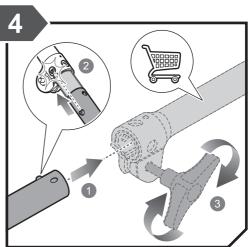


•




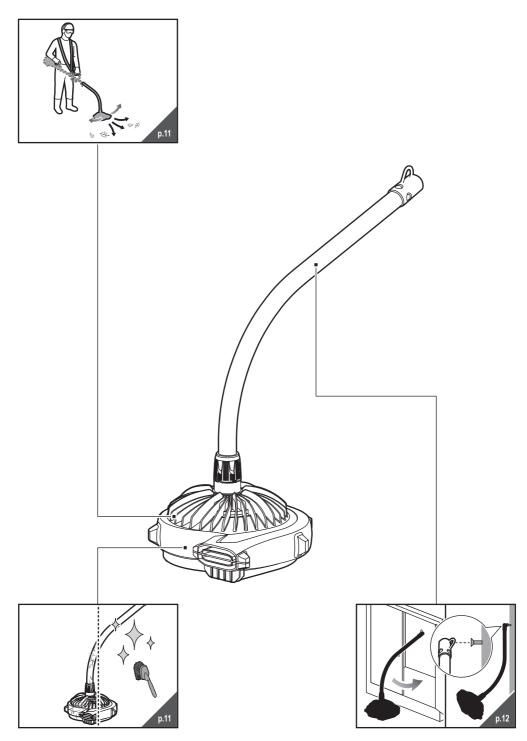







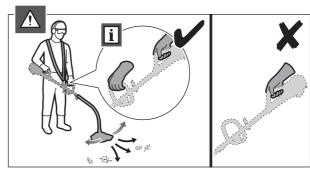

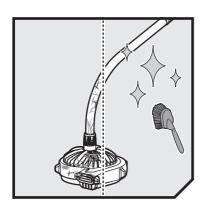


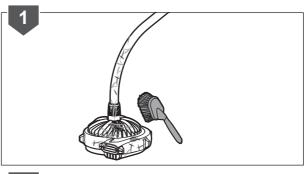


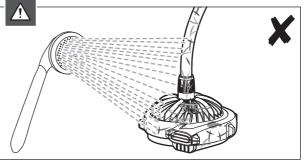







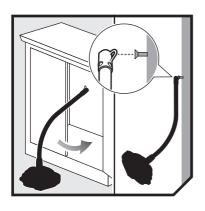

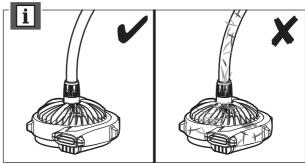

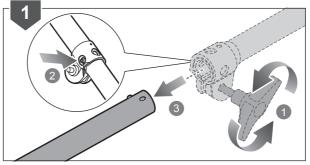

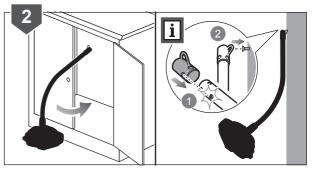







PRODUCT SPECIFICATIONS		
Blower attachment		
Model	ABE04	
Weight (blower attachment only)	1.82 kg	
For assembling with petrol-driven power head (below values are measured on RBC30SESA power head)		
Air velocity	241 km/h	
Air volume	480 m³/h	
Weight (power head only)	4.33 kg	
Fuel tank volume	415 mL	
Recommended tank fill	350 mL	
Engine displacement	30 cc	
Maximum engine performance	0.75 kW	
Fuel consumption (in accordance with ISO 8893) at max. engine performance	0.42 kg/h	
Engine speed (Max.)	12 000/min	
Engine speed (Idle)	2 800 - 3 800/min	
Noise emission level (in accordance with Annex A of EN 15503:2009+A2:2015)		
A-weighted sound pressure level at the operator position		
Racing	81.3 dB(A)	
Idling	94.6 dB(A)	
Equivalent	93.0 dB(A)	
Uncertainty	2.5 dB	
A-weighted sound power level		
Racing	89.7 dB(A)	
Idling	101.0 dB(A)	
Equivalent	101.0 dB(A)	

Vibration level (in accordance with Annex B of EN 15503:2009+A2:2015)

Front handle Idling 0.8 m/s² Racing 0.1 m/s² Equivalent vibration total value 0.2 m/s² Rear handle Idling 0.6 m/s² Racing 1.0 m/s² Equivalent vibration total value 0.9 m/s² Equivalent vibration total value 0.9 m/s² Equivalent vibration total value 0.9 m/s² Uncertainty 1.5 m/s² For assembling with electric-driven power head (below values are measured with RPH1100E power head) Air velocity 241 km/h Air volume 480 m³/h Rated power 1100 W Rated voltage 230V ~ 50 Hz Weight (power head only) 3.3 kg Noise emission level (in accordance with Annex CC of EN 50636-2-100:2014) A-weighted sound pressure level 85.3 dB(A) at the operator position Uncertainty 2.5 dB A-weighted sound power level 100.5 dB(A) Uncertainty 2.0 dB Vibration level (in accordance with Annex CC of EN 50636-2-100:2014) Front handle 2.9 m/s² Rear handle 4.1 m/s² Uncertainty 1.5 m/s²	15503:2009+A2:2015)	
Racing 0.1 m/s² Equivalent vibration total value 0.2 m/s² Rear handle Idling 0.6 m/s² Racing 1.0 m/s² Equivalent vibration total value 0.9 m/s² Equivalent vibration total value 0.9 m/s² Uncertainty 1.5 m/s² For assembling with electric-driven power head (below values are measured with RPH1100E power head) Air velocity 241 km/h Air volume 480 m³/h Rated power 1100 W Rated voltage 230V ~ 50 Hz Weight (power head only) 3.3 kg Noise emission level (in accordance with Annex CC of EN 50636-2-100:2014) A-weighted sound pressure level at the operator position Uncertainty 2.5 dB A-weighted sound power level 100.5 dB(A) Uncertainty 2.0 dB Vibration level (in accordance with Annex CC of EN 50636-2-100:2014) Front handle 2.9 m/s² Rear handle 4.1 m/s²	Front handle	
Equivalent vibration total value Rear handle Idling Racing Racing 1.0 m/s² Equivalent vibration total value Uncertainty 1.5 m/s² For assembling with electric-driven power head (below values are measured with RPH1100E power head) Air velocity Air volume 480 m³/h Rated power 1100 W Rated voltage 230V ~ 50 Hz Weight (power head only) 3.3 kg Noise emission level (in accordance with Annex CC of EN 50636-2-100:2014) A-weighted sound pressure level at the operator position Uncertainty 2.5 dB A-weighted sound power level 100.5 dB(A) Uncertainty 2.0 dB Vibration level (in accordance with Annex CC of EN 50636-2-100:2014) Front handle 2.9 m/s² Rear handle 4.1 m/s²	Idling	0.8 m/s ²
Rear handle Idling 0.6 m/s² Racing 1.0 m/s² Equivalent vibration total value 0.9 m/s² Uncertainty 1.5 m/s² For assembling with electric-driven power head (below values are measured with RPH1100E power head) Air velocity 241 km/h Air volume 480 m³/h Rated power 1100 W Rated voltage 230V ~ 50 Hz Weight (power head only) 3.3 kg Noise emission level (in accordance with Annex CC of EN 50636-2-100:2014) A-weighted sound pressure level 85.3 dB(A) at the operator position Uncertainty 2.5 dB A-weighted sound power level 100.5 dB(A) Uncertainty 2.0 dB Vibration level (in accordance with Annex CC of EN 50636-2-100:2014) Front handle 2.9 m/s² Rear handle 4.1 m/s²	Racing	0.1 m/s ²
Idling 0.6 m/s² Racing 1.0 m/s² Equivalent vibration total value 0.9 m/s² Uncertainty 1.5 m/s² For assembling with electric-driven power head (below values are measured with RPH1100E power head) Air velocity 241 km/h Air volume 480 m³/h Rated power 1100 W Rated voltage 230V ~ 50 Hz Weight (power head only) 3.3 kg Noise emission level (in accordance with Annex CC of EN 50636-2-100:2014) A-weighted sound pressure level at the operator position Uncertainty 2.5 dB A-weighted sound power level 100.5 dB(A) Uncertainty 2.0 dB Vibration level (in accordance with Annex CC of EN 50636-2-100:2014) Front handle 2.9 m/s² Rear handle 4.1 m/s²	Equivalent vibration total value	0.2 m/s ²
Racing 1.0 m/s² Equivalent vibration total value 0.9 m/s² Uncertainty 1.5 m/s² For assembling with electric-driven power head (below values are measured with RPH1100E power head) Air velocity 241 km/h Air volume 480 m³/h Rated power 1100 W Rated voltage 230V ~ 50 Hz Weight (power head only) 3.3 kg Noise emission level (in accordance with Annex CC of EN 50636-2-100:2014) A-weighted sound pressure level at the operator position Uncertainty 2.5 dB A-weighted sound power level 100.5 dB(A) Uncertainty 2.0 dB Vibration level (in accordance with Annex CC of EN 50636-2-100:2014) Front handle 2.9 m/s² Rear handle 4.1 m/s²	Rear handle	
Equivalent vibration total value 0.9 m/s² Uncertainty 1.5 m/s² For assembling with electric-driven power head (below values are measured with RPH1100E power head) Air velocity 241 km/h Air volume 480 m³/h Rated power 1100 W Rated voltage 230V ~ 50 Hz Weight (power head only) 3.3 kg Noise emission level (in accordance with Annex CC of EN 50636-2-100:2014) A-weighted sound pressure level at the operator position Uncertainty 2.5 dB A-weighted sound power level 100.5 dB(A) Uncertainty 2.0 dB Vibration level (in accordance with Annex CC of EN 50636-2-100:2014) Front handle 2.9 m/s² Rear handle 4.1 m/s²	Idling	0.6 m/s ²
Uncertainty For assembling with electric-driven power head (below values are measured with RPH1100E power head) Air velocity Air volume 480 m³/h Rated power 1100 W Rated voltage 230V ~ 50 Hz Weight (power head only) 3.3 kg Noise emission level (in accordance with Annex CC of EN 50636-2-100:2014) A-weighted sound pressure level at the operator position Uncertainty 2.5 dB A-weighted sound power level 100.5 dB(A) Uncertainty 2.0 dB Vibration level (in accordance with Annex CC of EN 50636-2-100:2014) Front handle 2.9 m/s² Rear handle 4.1 m/s²	Racing	1.0 m/s ²
For assembling with electric-driven power head (below values are measured with RPH1100E power head) Air velocity Air volume 480 m³/h Rated power 1100 W Rated voltage 230V ~ 50 Hz Weight (power head only) 3.3 kg Noise emission level (in accordance with Annex CC of EN 50636-2-100:2014) A-weighted sound pressure level at the operator position Uncertainty 2.5 dB A-weighted sound power level 100.5 dB(A) Uncertainty 2.0 dB Vibration level (in accordance with Annex CC of EN 50636-2-100:2014) Front handle 2.9 m/s² Rear handle 4.1 m/s²	Equivalent vibration total value	0.9 m/s ²
measured with RPH1100E power head) Air velocity 241 km/h Air volume 480 m³/h Rated power 1100 W Rated voltage 230V ~ 50 Hz Weight (power head only) 3.3 kg Noise emission level (in accordance with Annex CC of EN 50636-2-100:2014) A-weighted sound pressure level at the operator position 85.3 dB(A) at the operator position Uncertainty 2.5 dB A-weighted sound power level 100.5 dB(A) Uncertainty 2.0 dB Vibration level (in accordance with Annex CC of EN 50636-2-100:2014) Front handle 2.9 m/s² Rear handle 4.1 m/s²	Uncertainty	1.5 m/s ²
Air volume Air volume Rated power 1100 W Rated voltage 230V ~ 50 Hz Weight (power head only) 3.3 kg Noise emission level (in accordance with Annex CC of EN 50636-2-100:2014) A-weighted sound pressure level at the operator position Uncertainty 2.5 dB A-weighted sound power level 100.5 dB(A) Uncertainty 2.0 dB Vibration level (in accordance with Annex CC of EN 50636-2-100:2014) Front handle 2.9 m/s² Rear handle 4.1 m/s²		r head (below values are
Rated power 1100 W Rated voltage 230V ~ 50 Hz Weight (power head only) 3.3 kg Noise emission level (in accordance with Annex CC of EN 50636-2-100:2014) A-weighted sound pressure level at the operator position Uncertainty 2.5 dB A-weighted sound power level 100.5 dB(A) Uncertainty 2.0 dB Vibration level (in accordance with Annex CC of EN 50636-2-100:2014) Front handle 2.9 m/s² Rear handle 4.1 m/s²	Air velocity	241 km/h
Rated voltage 230V ~ 50 Hz Weight (power head only) 3.3 kg Noise emission level (in accordance with Annex CC of EN 50636-2-100:2014) A-weighted sound pressure level 85.3 dB(A) at the operator position Uncertainty 2.5 dB A-weighted sound power level 100.5 dB(A) Uncertainty 2.0 dB Vibration level (in accordance with Annex CC of EN 50636-2-100:2014) Front handle 2.9 m/s² Rear handle 4.1 m/s²	Air volume	480 m³/h
Weight (power head only) Noise emission level (in accordance with Annex CC of EN 50636-2-100:2014) A-weighted sound pressure level at the operator position Uncertainty 2.5 dB A-weighted sound power level 100.5 dB(A) Uncertainty 2.0 dB Vibration level (in accordance with Annex CC of EN 50636-2-100:2014) Front handle 2.9 m/s² Rear handle 4.1 m/s²	Rated power	1100 W
Noise emission level (in accordance with Annex CC of EN 50636-2-100:2014) A-weighted sound pressure level 85.3 dB(A) at the operator position Uncertainty 2.5 dB A-weighted sound power level 100.5 dB(A) Uncertainty 2.0 dB Vibration level (in accordance with Annex CC of EN 50636-2-100:2014) Front handle 2.9 m/s² Rear handle 4.1 m/s²	Rated voltage	230V ~ 50 Hz
50636-2-100:2014) A-weighted sound pressure level at the operator position Uncertainty 2.5 dB A-weighted sound power level 100.5 dB(A) Uncertainty 2.0 dB Vibration level (in accordance with Annex CC of EN 50636-2-100:2014) Front handle 2.9 m/s² Rear handle 4.1 m/s²	Weight (power head only)	3.3 kg
at the operator position Uncertainty 2.5 dB A-weighted sound power level 100.5 dB(A) Uncertainty 2.0 dB Vibration level (in accordance with Annex CC of EN 50636-2-100:2014) Front handle 2.9 m/s² Rear handle 4.1 m/s²		ith Annex CC of EN
A-weighted sound power level 100.5 dB(A) Uncertainty 2.0 dB Vibration level (in accordance with Annex CC of EN 50636-2-100:2014) Front handle 2.9 m/s² Rear handle 4.1 m/s²	· ·	85.3 dB(A)
Uncertainty 2.0 dB Vibration level (in accordance with Annex CC of EN 50636-2-100:2014) Front handle 2.9 m/s² Rear handle 4.1 m/s²	Uncertainty	2.5 dB
Vibration level (in accordance with Annex CC of EN 50636-2-100:2014) Front handle 2.9 m/s² Rear handle 4.1 m/s²	A-weighted sound power level	100.5 dB(A)
100:2014) Front handle 2.9 m/s² Rear handle 4.1 m/s²	Uncertainty	2.0 dB
Rear handle 4.1 m/s ²		nex CC of EN 50636-2-
	Front handle	2.9 m/s ²
Uncertainty 1.5 m/s ²	Rear handle	4.1 m/s ²
	Uncertainty	1.5 m/s ²

A WARNING

The declared vibration value has been measured with a standard test method and may be used to compare one tool with another.

The declared vibration value may be used in a preliminary assessment of exposure.

2.5 dB

The vibration emission during actual use of power tool can differ from the declared total value depending on the ways in which the tool is used.

Identify safety measures to protect yourself based on an estimation of exposure in the actual conditions of use, taking account of all parts of the operating cycle such as the times when the tool is switched off and when it is running idle in addition to the trigger time.



Uncertainty







RYOBI® WARRANTY APPLICATION CONDITIONS

In addition to any statutory rights resulting from the purchase, this product is covered by a warranty as stated below.

- The warranty period is 24 months for consumers and commences on the date the product was purchased. This date
 has to be documented by an invoice or other proof of purchase. The product is designed and dedicated to consumer
 and private use only. So there is no warranty provided in case of professional or commercial use. This warranty applies
 only on new products.
- 2. There is a possibility to extend for a part of the range of power tools (AC/DC) the warranty period over the period described above using the registration on the www.ryobitools.eu website. The eligibility of products for extended warranty is clearly displayed in stores and / or on packaging and is contained within the product documentation. The end user is required to register his/her newly-acquired products online within 30 days from the date of purchase. The end user may register for the extended warranty in his/her country of residence if listed on the online registration form where this option is valid. Furthermore, end users must give their consent to the storage of their personal data that is required to be entered online. They must also accept the terms and conditions. The registration confirmation receipt, which is sent out by e-mail, and the original invoice showing the date of purchase will serve as proof of the extended warranty.
- 3. The warranty covers all defects of the product during the warranty period due to faults in workmanship or material at the purchase date. The warranty is limited to repair and/or replacement and does not include any other obligations including but not limited to incidental or consequential damages. The warranty is not valid if the product has been misused, used contrary to the instruction manual, or has been incorrectly connected to a power supply. This warranty does not apply to:
 - any damage to the product that is the result of improper or lack of maintenance
 - any product that has been altered or modified
 - any product where original identification (trade mark, serial number) markings have been defaced, altered or removed
 - any damage caused by non-observance of the instruction manual
 - any product not displaying the CE approval mark on the rating plate
 - any product that has been attempted to be repaired by a non-authorised warranty service centre or without prior authorisation by Techtronic Industries
 - any product connected to an improper power supply (amps, voltage, frequency)
 - any product used with inappropriate fuel mixture (fuel, oil, Ratio of oil / fuel mixture)
 - any damage caused by external influences (water, chemical, physical, shocks) or foreign substances
 - normal wear and tear spare parts
 - inappropriate use, overloading of the tool
 - use of non-approved accessories or parts
 - Accessories provided with the tool or purchased separately including but not limited to blades, saw chains, cutting lines etc.
 - Any periodic adjustments to or maintenance cleaning of carburetors
 - Components (parts and accessories) subject to natural wear and tear, including but not limited to bump knobs, drive belts, clutch, blades of hedge trimmers or lawn mowers, harness, cable throttle, carbon brushes, power cord, tines, felt washers, hitch pins, blower fans, blower and vacuum tubes, vacuum bag and straps, guide bars, saw chains, hoses, connector fittings, spray nozzles, wheels, spray wands, inner reels, outer spools, cutting lines, spark plugs, air filters, gas filters, mulching blades, etc.
- 4. For servicing, the product must be sent or presented to a RYOBI authorised service station listed for each country in the following list of service station addresses. In some countries your local RYOBI dealer undertakes to send the product to the RYOBI service organisation. When sending a product to a RYOBI service station, the product should be safely packed without any dangerous contents such as petrol, marked with sender's address and accompanied by a short description of the fault.
- 5. A repair / replacement under this warranty is free of charge. It does not constitute an extension or a new start of the warranty period. Exchanged parts or products become our property. In some countries delivery charges or postage will have to be paid by the sender. Your statutory rights arising from the purchase of the product remain unaffected.
- 6. This warranty is valid in the European Community, Switzerland, Iceland, Norway, Liechtenstein, Turkey and Russia. Outside these areas, please contact your authorised RYOBI dealer to determine if another warranty applies.







AUTHORISED SERVICE CENTRES

ACD PLANT LTD

145 Southbank Road Coundon

Coventry, West Midlands

CV6 1FG Phone: 02476 594348

Email: danmcgunigle@acdplant.co.uk

Web: www.acdplant.co.uk

CBS Power Tools Limited Unit 4, V P Square

Storeys Bar Rd, Fengate Peterborough, Cambridgeshire

PE1 5YS Phone: 01733 343031

Email: steve@cbspowertools.co.uk
Web: www.cbspowertools.com

C D Powertools

76 Old Road

Churwell Morley, Leeds LS27 7TH Phone: 0113 2718494

Email: info@cdpowertools.co.uk Web: www.cdpowertools.co.uk

C J Sinclair Limited

44 Victoria Road St Peters Broadstairs, Kent

CT10 2UG

Phone: 01843 869400 Email: repairs@cjsinclairltd.co.uk

Web: www.cjsinclairltd.co.uk

Powertech Ind Ltd Unit 2C, Ellison Road Norwood Ind, Killamarsh

Sheffield, South Yorkshire S21 2JG

Phone: 01142 474080

Email: stores@powertech-industrial.co.uk
Web: www.powertech-industrial.co.uk

RYCKO Technical Services LTD

104 Green Lane St Albans, Herts AL3 6EX

Phone: 08458 678790

Email: info@ryckotechnical.com Web: www.ryckotechnical.com

ToolTech Industrial Equipment 227 E Dunhill Road, Macosquin Coleraine, Co Londonderry BT514LQ

Phone: 028 70359493 Email: john@tooltech.org.uk

For an updated list of authorised service centres, visit http://en.ryobitools.eu/header/serviceand-support/service-agents.









DECLARATION OF CONFORMITY

Techtronic Industries GmbH Max-Eyth-Straße 10, 71364 Winnenden, Germany

Herewith we declare that the product

Blower Attachment Model number: ABE04

Serial number range: 15400801000001 - 15400801999999

is in conformity with the following European Directives and harmonised standards

For assembling with petrol-driven power head

2006/42/EC, 2014/30/EU, 2000/14/EC, 2005/88/EC, 97/68/ EC as last amended 2012/46/EU, EN 15503:2009+A2:2015, EN ISO 14982:2009

For assembling with electric-driven power head

2006/42/EC, 2014/30/EU, 2000/14/EC,2005/88/EC, 2011/65/EU, EN 60335-1:2012+A11:2014+A13:2017, EN 50636-2-100:2014, EN 55014-1:2017, EN 55014-2:2015, EN 61000-3-2:2014, EN 61000-3-3:2013, EN 50581:2012

Measured sound power level: 101.0 dB(A) Guaranteed sound power level: 104 dB(A)

Conformity assessment method to Annex V Directive 2000/14/EC amended by 2005/88/EC.

The blower attachment ABE04 is intended to assemble with RYOBI / HOMELITE petrol driven power head of 30 cc or less or with the RPH1100E electric power head.

This partly completed machinery must not be put into service until the final machinery into which it is to be incorporated has been declared in conformity with the provisions of the Machinery Directive 2006/42/EC, where appropriate.

tage

Andrew John Eyre (BEng, CEng, MIET) Vice President, Regulatory & Safety Winnenden, May 7, 2018

Authorised to compile the technical file: Alexander Krug, Managing Director Techtronic Industries GmbH Max-Eyth-Straße 10, 71364 Winnenden, Germany









•

•







961476016-01



